



# GOSURROUND 410

2.0 Soundbar

Get ready for MORE, for a LIFE of WOW with your all new GOVO GOSURROUND 410. We strongly recommend you go through this manual completely before beginning to use the product as it contains important technical information to ensure you have a seamless audio experience. It can also be referred to in times of difficulty.

## PACKAGE CONTENTS

- 1 x Soundbar.
- 1 x AUX Cable.
- 1 x Audio Cable.
- 1 x User Manual.
- 1 x Remote Control.
- 1 x Warranty Card.


## PRODUCT USE

- Firstly, plug the AC power cable of the soundbar to the external socket.
- Use one set audio cable (3.5mm to 3.5mm) to connect external audio sources (DVD,mobile,TV).
- Press 'USB' on panel or "USB" key in remote control exchange to "USB" mode, to play a USB card.
- Press 'BT' on panel or 'BT' key in remote control exchange to "BT" mode, open mobile phone, search BT name "GOSURROUND 410" to connect.

## SPECIFICATIONS

Speaker Type	2.0 Soundbar
Input ratings	110-240V AC 50/60Hz
Output power	40W
Product Dimension	L700*H78*D48mm
Bluetooth version	5.0

## DESCRIPTION FOR REMOTE CONTROL

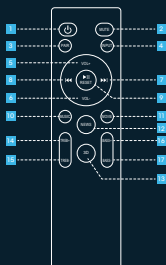

- 1 "Power" Key: Standby mode for power ON/OFF.
- 2 "MUTE" Key: MUTE ON/OFF.
- 3 "PAIR" Key: Bluetooth disconnect/connect, long press to disconnect Bluetooth, long press again to reconnect to Bluetooth.
- 4 "INPUT" Key: The input mode switch, BT, OPT, HDMI (ARC), USB, AUX-IN input mode cycle switch. (Attention: When connected to the Bluetooth of the Phone, the volume of the Soundbar will be the same as the phone.)
- 5 Volume + Key: BT, OPT, HDMI (ARC), USB, AUX IN mode adjust the volume +.
- 6 Volume - Key: BT, OPT, HDMI (ARC), USB, AUX IN mode adjust the volume -.
- 7 >>> Key: Bluetooth mode short press is next, in USB Mode short press is the next song, the Long press is Fast Forward.
- 8 <<< Key: Bluetooth mode short press is previous, in USB Mode short press is the previous song, the Long press is fast backward.
- 9 >||< / RESET Key: Bluetooth and USB mode, short press to pause/play, AUX-IN mode, short press is MUTE / PLAY, long press is reset function, "RESET" key: reset MAS. VOL (default "U 15"), BASS (default "SU 8"), TRE (default "HI 8"), default volume.
- 10 "MUSIC" Key: The music effect key. Each boot is the default music mode. Display E1.
- 11 "MOVIE" Key: The movie sound effect key. Display E2.
- 12 "NEWS" Key: The news sound effect key. Display E3.

- 13 "3D" Key: The 3D sound effect key. Display E4.
- 14 TREB + : Adjust the treble +.
- 15 TREB - : Adjust the treble -.
- 16 BASS + : Adjust the bass +.
- 17 BASS - : Adjust the bass -.

ERP low power consumption mode No signal input for 30 minutes, Soundbar will automatically enter the Standby mode.

## SOUNDBAR (BACK)




- 1 AUX IN
- 2 OPT INPUT
- 3 HDMI INPUT

## WALL MOUNTING

- Measure 20.47 inch (520mm) and drill 2 parallel holes (1/4 inch each) in the wall.
- Firmly apply a dowel into each hole in the wall (dowel only required for solid wall).
- Attach the sound bar to the screws on the wall, and press and push the sound bar to the right 1/8 inch each to lock.

## BUTTON CONTROL

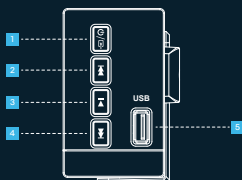


- 1 Press it to enter Standby ON/BT/OPT/ HDMI/USB/AUX, hold it to be Standby OFF.
- 2 Press it to select the next song in BT/USB mode, hold it to adjust volume up in all modes.
- 3 Press it to pause/play in BT/USB mode, hold it to disconnect or connect the device in BT mode.
- 4 Press it to select the previous song in BT/USB mode, hold it to adjust volume down in all modes.
- 5 USB input.

## BATTERY INSTALLATION

- 1 Open the battery case.
- 2 Insert 2 pcs AAA battery without the polarity reversed.
- 3 Close the battery case.
- 4 Keep within 5 meter range, 30 degree angle while aiming at the unit.

### Precautionary Note:

Please remove the batteries when the unit is not being used for a long period of time.

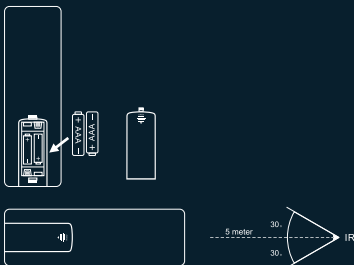

## IMPORTANT SAFETY INSTRUCTIONS

- 1 Please read the instructions, user manual & warning precautions carefully before using the unit.
- 2 Do not expose or use this product near water.
- 3 To clean this product use a dry cloth only, do not use chemicals.
- 4 Do not block any ventilation openings (Place on a crafty platform to allow proper ventilation.)
- 5 Install this unit in accordance with govo's instructions.
- 6 Do not install the speaker system near any heat sources such as radiators, heat registers, stove or any other apparatus (including amplifiers) that may produce excessive heat.
- 7 Protect the power cord from being pinched particularly at the plug point and the pont where cables exit the unit.
- 8 Only use accessories and attachments specified/supplied by the manufacturer.
- 9 Only use standard cart/stand/tripod/bracket or table specified or sold by the manufacturer with the unit.
- 10 Use caution to avoid injury when moving the cart & unit combination to avoid injury.
- 11 Please unplug this apparatus during lightning storms or when it is not being utilized for long periods of time.

- 12 Refer all servicing to qualified service personnel.

Servicing is required when:

- The unit has been exposed to liquid substance/rain or moisture.
- Objects have fallen into the unit.
- The unit does not operate normally, or has been dropped.

## SAFETY PRECAUTIONS

### WARNING:



To prevent fire & electrocution, do not expose this product or any of its components to water, fire, high temperatures or damp areas.

Note: This product is for indoor use only.



Caution: This icon is intended to alert the user of the presence of uninsulated "dangerous voltage" that is within the product's enclosure. Thus providing sufficient reason to constitute a risk of electrical shock.



Caution: This icon is intended to alert the user of the presence of important operating & maintenance instructions in the manual & literature accompanying the product.

Life's too short for "ok". Too short to have stuff in our lives that's "ok, I guess". "But-I'm-almost-home!" battery life. "But-it-only-fell-off-the-table" build quality. "Has-someone-stolen-the-bass?" sound quality.

We say NO to "ok". In 2021, we set out to make stuff that's better in little ways that make a big difference.

Stuff for people who expect more. Who want the songs to keep playing until they're home. Who are on a mission to stay up all night. Who want to know they'll feel great and look awesome, every day.

For people who want every day to be a "WOW" day.

# GO VO