



### AC POWER

IMPORTANT NOTES

- Make sure the power supply is correct and never handle the power cord or its plug with wet hands when plugging into, or unplugging from an outlet.
- Ensure that the main power switch is in the "OFF" position before connecting to AC power cord to the power supply to avoid damage to the unit.
- A damaged power cord can easily cause an electric shock or fire hazard, never use a power cord after it has been damaged.

9

- Do not block any ventilation openings.
- Do not install the speaker system near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched particularly at plug points and the point where they exit from the unit.
- Only use attachments/accessories specified by the manufacturer.
- Use only with the cart, stand, tripod, bracket or table specified by the manufacturer or sold with the unit. When cart is used, be cautious while moving the cart unit combination to avoid injury from tip-over.

Explanation of the symbols on the device

**CAUTION**  
RISK OF ELECTRIC SHOCK  
DO NOT OPEN

Warning: To reduce the risk of electric shock, do not remove cover (or back). No user-serviceable parts inside. Refer servicing to qualified service personnel.

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Get ready for MORE, for a LIFE of WOW with your all new GoSurround 750. We strongly recommend you go through this manual completely before beginning to use the product as it contains important technical information to ensure you have a seamless audio experience. It can also be referred to in times of difficulty.

### PACKAGE CONTENTS

- 1 x Soundbar
- 1 x Subwoofer
- 1 x Remote Control
- 1 x Aux Cable
- 1 x Power cord
- 1 x User Manual
- 1 x Warranty Card

### SPECIFICATIONS

Input voltage	100-240V AC 50/60Hz
Output Power	120 W
Soundbar Driver	4 x 2.25"
Subwoofer Driver	1 x 5.25"
Subwoofer (Dimension)	W150 x L220 x H340
Soundbar (Dimension)	W92 x L710 x H65mm
Bluetooth version	5.3

8

### PRODUCT USE

- Plug the detachable power cable of the soundbar into the external socket, the unit is currently in standby mode.
- Please plug the RCA cable of the woofer to the SUB output jack in the soundbar.
- AUX: Use 3.5mm AUX in cable to connect external audio sources (DVD, Mobile, TV). Press **M** on panel or "AUX" button on the remote control to select AUX IN mode.
- HDMI: Use your HDMI cable to connect the soundbar with your HDMI (ARC) device. Press **M** on panel or "HDMI (ARC)" in the remote control to select HDMI mode.
- USB: Insert your USB disk into the USB socket in the soundbar, it will switch to USB mode directly. You can also press **M** on the panel or "USB" in the remote control to switch to USB mode.
- BT: Press **M** on panel or "BT" in remote control to enter BT mode. Turn on your BT device to find Bluetooth name "GoSurround 750" and pair with it.
- OPT: Use your Optical cable to connect the soundbar with your OPT device. Press **M** on panel or "OPT" in the remote control to select OPT mode.

### WALL MOUNTING

#### SOUNDBAR

- Measure 20 inches (510mm) and drill 2 parallel holes (1/4 inch each) in the wall.
- Firmly apply a dowel into each hole in the wall (dowel only required for solid wall).
- Attach the soundbar to the screws on the wall and press and push the soundbar to the right 1/8 inch each to lock.

### SAFETY INSTRUCTIONS

- Read these instructions before using the product.
- Read all warnings carefully.
- Follow all instructions carefully.
- Do not use this apparatus near water.
- Clean only with dry cloth.

2

### BUTTON CONTROL

- ⏻: Short press standby ON/OFF. On standby.
- ⏸: Short press to switch through BT, AUX, HDMI (ARC), USB, OPT function.
- ⏮/⏭: Short press to PAUSE/PLAY in Bluetooth, USB and AUX IN modes.
- ⏪: Short Press to turn to previous track, hold it to adjust volume down in all modes
- ⏩: Short Press to turn to next track, hold it to adjust volume up in all modes.

6

### REMOTE BATTERY INSTALLATION

- Open the battery case.
- Insert 2 batteries with the polarity reversed.
- Close the battery case.
- Keep within 5 meter range, 30 degree angle while aiming at the unit.

NOTE:  
Please remove the batteries in case you don't use the remote for a long period of time.

3

### DESCRIPTION OF THE REMOTE CONTROL

- ⏻: Standby mode for power ON/OFF.
- ⏸: MUTE/UNMUTE
- TREB +: Adjust the treble +.
- TREB -: Adjust the treble -.
- BASS -: Adjust the bass -.
- BASS +: Adjust the bass +.
- ⏮: In Bluetooth/USB mode, short press is previous song, the Long press is fast backward.
- ⏭: In Bluetooth/USB Mode, short press is next song, the Long press is fast forward.
- Volume +: BT, HDMI (ARC), USB, AUX IN mode adjust the volume +.
- Volume -: BT, HDMI (ARC), USB, AUX IN mode adjust the volume -.
- ⏸: In Bluetooth/USB/AUX-IN mode, short press to pause/play.
- MODE: Cycle switch between BT (Bluetooth), HDMI (ARC), USB, OPT and AUX-IN modes. (Attention: When connected to the Bluetooth of the iPhone, the volume of the Soundbar will be the same as the phone.)
- USB: Short press the "USB" to connect USB mode.
- BT: Short press the "BT" to connect, long press to disconnect Bluetooth.
- HDMI ARC: Short press the "HDMI ARC" key to connect HDMI mode.
- AUX: Short press the "AUX" key to connect AUX mode.
- OPT: Short press the "OPT" key to connect Optical mode.
- "EQ": Switch through the 3 auto equalizer modes EQ1 (Music), EQ2 (Movie), EQ3 (News).
- ⏮: Repeat the songs in USB mode.
- 3D: Short press the "3D" key to connect 3D Surround mode.

### SOUNDBAR (BACK)

- USB
- OPT
- HDMI (ARC)
- AUX
- SW OUT

4

5