

Get ready for MORE, for a LIFE of WOW with your all new GOCRUSH 410. We strongly recommend you go through this manual completely before beginning to use the product as it contains important technical information to ensure you have a seamless audio experience. It can also be referred to in times of difficulty.

PACKAGE CONTENTS

- Bluetooth speaker
- Charging Cable
- Audio Cable
- User Manual
- Warranty card

POWER ON / OFF

- Long press the power switch for 2 seconds to turn on, the LED indicator turns blue and then flashes blue.
- Long press the power switch for 2 seconds to turn off, the LED status indicator goes off.

BLUETOOTH CONNECTION:

- Turn on the Bluetooth speaker, the LED indicator flashes blue continuously while waiting for pairing.
- Then active the Bluetooth of your phone and search for "GOCRUSH 900". Click manually to connect. If the connection is successful, the LED indicator will turn steady blue.
- Since the speaker can automatically reconnect to the last paired device. When the Bluetooth of your device turns on, (Just turn on the speaker), it will automatically reconnect.

Answering incoming calls:

Press the play / pause button to answer incoming calls.

Tip:

 Since some mobile phones default to answer calls via their own receiver, please refer to the instructions of your phone and set on your phone.

End the call:

Press the play / pause button once to end the current call.

Refuse incoming calls:

Long press the play / pause button for 2 seconds to reject when there
comes a call.

Last number redial:

Dual press the play / pause button to redial the last calling number.

BLUETOOTH DISCONNECTION:

Dual press the mode button to cut off the Blutooth connection

Switching mode:

Short press mode button to select mode.

(Bluetooth / Micro SD card / AUX in)

PACKING LIST



 
Warranty Card X1

PRODUCT STRUCTURE

User manual X1



SPEAKERPHONE



- (b) X1 Answer / End Call
- **⑤** >2S Reject call.
- **③** X2 Redial the last calling number.

Siri

■ **⑤** >2S When connecting the Iphone.



Phone call function is just available in Blutooth mode

CONNECT VIA AUX



Note: Mode switching can only work when their AUX / micro SD Functions.

MICRO SD CARD MODE



CHARGE YOUR GOCRUSH 410




The LED Indicator lights up red, the battery is charging.

LED is off fully charged.

To preserve battery lifespan, fully charge at least once, every 45 days.

PRODUCT USAGE SCENARIOS

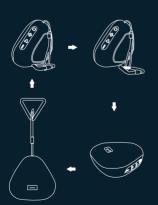

TECHNICAL SPECIFICATIONS

Waterproof	IPX7
Bluetooth version	V5.0
Size	98*94*42mm
Charging Cable	Standard cable
Wireless operation ranges	10M (without obstacles)
Speaker	40mm
Profiles supported	AVRCP, A2DP, HFP, HSP
SNR	≥65dB
Charger/Adapter	DC 5V / 1A
Speaker frequency	80Hz – 20kHz
Output power	4W
Battery capacity	3.7V/1800mAh
Playtime	10H
Talk Time	10H
Charging Time	3.5H
Support	Bluetooth, AUX, Micro SD

WARNING

- Please follow the instruction to operate.
- Please charge the product with input power below 5V/1A in order to protect the battery.
- Please store or use the product in a normal temperature environment.
- Please keep the product from heat source, such as radiators, hot air regulators, stoves, or other heat generating instruments.
- Don't jam the ports of the product, such as charger port, LED port, and microphone etc.
- In order to protect your hearing and extend the speaker service life, it is not recommended to adjust the volume to the maximum level for a long time.

Life's too short for "ok". Too short to have stuff in our lives that's "ok, I guess". "But-I'm-almost home!" battery life. "But-it-only-fell-off-the-table" build quality. "Has-someone-stolen-the-bass?" sound quality.

We say NO to "ok". In 2021, we set out to make stuff that's better in little ways that make a big difference.

Stuff for people who expect more. Who want the songs to keep playing until they're home. Who are on a mission to stay up all night. Who want to know they'll feel great and look awesome, every day.

For people who want every day to be a 'WOW' days.