



GOKIXX 421

Get ready for MORE, for a LIFE of WOW, with your all new GOKIXX 421. We strongly recommend you go through this manual completely before beginning to use the product as it contains important technical information to ensure you have a seamless audio experience. It can also be referred to in times of difficulty.

PACKAGE CONTENTS

- 1 x GOKIXX 421
- 2 x Pairs Additional Ear Muffs
- 1 x Warranty Card
- 1 x Manual
- 1 x USB Charging Cable

PRODUCT SPECIFICATIONS

Model No	GOKIXX 421
Bluetooth Version	5.0
Transmission Distance	10m
Driver size	10mm
Sensitivity	104dB±3dB At 1KHz
Battery capacity	120 mAh, 3.7V
Dual Pairing	Yes

- Contact the charging port with any USB charging adapter or active computer USB port.
- Charging will start automatically when LED indicator turns red.
- The earphones are fully charged when LED indicator turns blue.


Note: Charge the earphones at least once every 1 month when not in use for a long time.

PAIRING

- Note: Re-pairing, the earphones can remember previously paired devices, if you have previously paired the earphones with a device, simply turn on your device and the earphones. The earphones can automatically connect without going into inpairing mode within 10 seconds.
- Activate Bluetooth on the device you seek to pair with the earphones (Phone, tablet, etc)
- Turn the earphones on by holding the multi-function button.
- Upon first use, the earphones will immediately enter into pairing mode (LED will start flashing red and blue alternatively). Select "GOKIXX 421" in Bluetooth menu on your device.
- Once paired, you'll hear an audio "You are now connected to GOVO Life"

Charging time	1-2 Hours
Music Playback time	10 Hours
Operation Frequency range	20Hz-20KHz

PRODUCT DIAGRAM

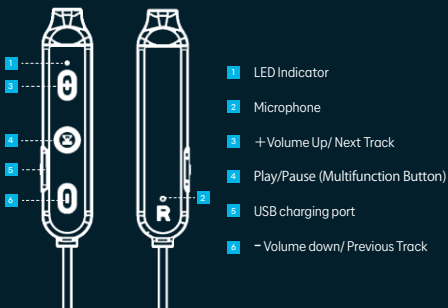

CHARGING

- Earphones are partially charged at the factory. Please make sure that you fully charge it before using it for the first time.

CONTROL YOUR EARPHONES

Call setting:

- Answer /end a call (Press once): Short press Multi-function button.
- Reject a call: Long press Multi-function button for 2 seconds.

Play music:

- Play music : Short press Multi-function button or use device to operate.
- Pause music : Short press Multi-function button or use device to operate.
- Play last music : Long press “-” or use device when you are listening to music.
- Play next music : Long press “+” or use device when you are listening to music.
- Volume up : Short press “+”.
- Volume down : Short press “-”.

This guide is provided to help you get started quickly with your wireless stereo earphones; please read it carefully and save it for future reference.

- Please do not rotate the headset when the head band has been set/pushed to the lowest position.
- This appliance should be used in moderate climates.

WARNING

- To prevent potential hearing damage, do not listen at high volume levels for long periods.
- Do not turn the volume up too high; doctors warn against prolonged exposure to high volumes.
- Stop using the product or lower the volume if you feel your ears ringing.
- Prolonged listening at high volumes could lead to hearing damage

Life's too short for “ok”. Too short to have stuff in our lives that’s “ok, I guess”. “But-I’m-almost home!” battery life. “But-it-only-fell-off-the-table” build quality. “Has-someone-stolen-the-bass?” sound quality.

We say NO to “ok”. In 2021, we set out to make stuff that’s better in little ways that make a big difference.

Stuff for people who expect more. Who want the songs to keep playing until they’re home. Who are on a mission to stay up all night. Who want to know they’ll feel great and look awesome, every day.

For people who want every day to be a ‘WOW’ day.

SAFETY INTRODUCTIONS

- Please read, follow and keep these instructions.
- Heed all warnings on the product and in the instructions for use.
- Stop using this product immediately if it causes discomfort or pain. When using this product, it is recommended that you limit the volume to help avoid causing harm to your ears and danger resulting from being unable to hear what is going on around you.
- Keep the device out of extreme heat and humidity.
- Do not use the device near water, such as sinks, bathtubs, swimming pools, washing machines, tubs of water, etc.
- Observe all signs and instructions that require an electrical device or radio product to be switched off in designated areas, such as petrol/refueling stations, hospitals, blasting areas, potentially explosive atmospheres and aircrafts.
- Using earphones while driving can distract you and increase the likelihood of an accident. If driving conditions demand it (such as bad weather, high traffic density, presence of children in the car, difficult road conditions), pull off the road and park before making or answering calls.
- Battery life may differ depending on personal habits.

GO
VO